

Speaker + S-Mix Setup INFORMATION GUIDE

! Speakers **MUST** be placed on stands. This will protect the speakers from spilt drinks & damage from being on the ground. This will also ensure you receive the best sound quality from the speakers being at head height

STEP 1 - SET UP THE SPEAKER STANDS



Loosen the center knob (A) & pull down on the speaker tripod to widen the tripod legs. Re-tighten the knob when the center pole is approximately 20cm above the ground

Lift the speaker using the handles on either side & slowly lower it through the hole (C) onto the speaker stand (B). Ask for help if you are finding it hard to lift the speaker and lower it onto the stand yourself

STEP 2 - CONNECT POWER TO THE SPEAKER



Plug the power lead (D) into the back of the speaker (E). The power lead is located in the top area of the speaker bag. Ensure power switch is turned OFF (F)

Plug the other end of the lead into a power point & switch ON the power (G)



STEP 3 - CONNECT THE MUSIC DEVICE



Connect the AUX Cable (H) into the headphone jack on your music device (mobile phone, ipod, computer, tablet)
Ensure the volume on your device is set to FULL volume

STEP 4 - CONNECT POWER TO THE S-MIX



Connect the Power Plug into a power point socket (I). Ensure the switch is turned on. A Red light will appear on the back of the S-Mix (J)

STEP 5 - CONNECT SPEAKER LEADS



Connect speaker leads from the S-MIX (K) to the supplied extension lead (L). Connect the other end (M) to the back of the speaker (N). Switch on the speakers (O). The "I" on the switch should be pressed in & the Yellow "Power On" LED Indicator should be lit (P). *Ensure the volume control is set to FULL volume on both Speakers (Q)*

SOUND MANAGEMENT



Ensure both your music device & both speakers (Q) are set to FULL volume

Volume is only to be adjusted from the S-Mix itself using the first volume knob (CH 4/5) (R)

