

LED DANCEFLOOR

IMPORTANT INFORMATION




LED DANCEFLOOR – IMPORTANT INFORMATION

BEFORE YOU HIRE - YOUR DESIGNATED DANCEFLOOR AREA MUST BE...

- 1** Flat, hard & level
- 2** Indoors or undercover
- 3** Able to be installed along one side of a wall with power sockets

GENERAL DANCEFLOOR TILE INFORMATION

TILE INFORMATION

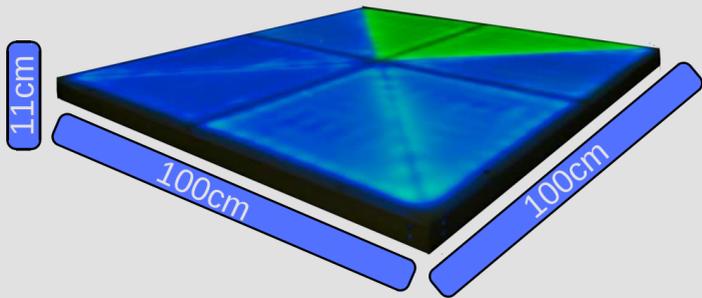


SIZE	WEIGHT	WATTS
W: 100cm	40kg / tile	100W / tile
D: 100cm		
H: 11cm		

EDGING INFORMATION

Optional Extra - Available at extra cost



EDGING SIZE	EDGING ANGLE
W: 127cm	68°
D: 27cm	
H: 11cm	

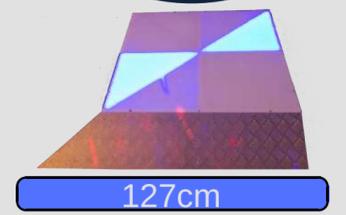


DANCEFLOOR IS NOT WATERPROOF. DRINKS OF ANY KIND CANNOT BE CONSUMED ON THE DANCEFLOOR

COLOUR SEQUENCES


Your dancefloor will be pre programmed to cycle through random patterns & colours at various speeds

Standard colours include:

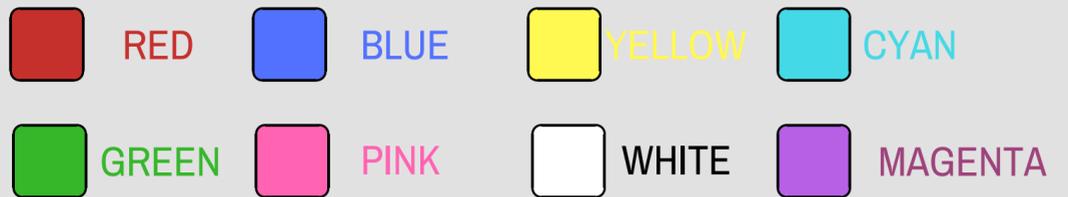


! Custom patterns, speed & colours are available for programming at an extra cost. Please contact our office with your requirements & for a quote

 POWER REQUIREMENTS




1-25 TILES

 single podium
double podium
3m x 3m
4m x 4m
5m x 5m




SINGLE POWER POINT
SINGLE CIRCUIT

 


26-49 TILES

 6m x 6m
7m x 7m



2 POWER POINTS
2 POWER CIRCUITS

 

50+ TILES

8m x 8m
9m x 9m
10m x 10m



3 PHASE POWER

3 PHASE DISTRIBUTION BOARD WILL BE SUPPLIED BY FEEL GOOD EVENTS

Installation Included In Price

Delivery Costs **Not** Included



LED DANCEFLOOR – IMPORTANT INFORMATION

FREQUENTLY ASKED QUESTIONS

BEFORE YOU MAKE YOUR BOOKING

Do I need edging?

The dancefloor is 11cm high (approximately the height of a standard tissue box). Edging (ramp from the floor to the dancefloor) is optional and is not required for any sized dancefloor. We do however recommend edging for larger setups (7m x 7m +)

What is a power circuit?

A power circuit can be simply described as a group of electrical sockets. You can determine how many circuits your home has by how many switches your electrical powerbox has (located on the side of your house). On average each home has 7 circuits. Circuits may include all the power outlets in your kitchen, living room and bedrooms, lighting for the living room, the oven, the air conditioner etc. A standard circuit can take up to 2400 Watts. Be aware that our tiles utilise 100 Watts for each dancefloor tile

Can I have my dancefloor set up in the middle of a room?

The dancefloor must be set up against a wall with power sockets. This prerequisite is required to hide the cabling and to ensure it doesn't become a tripping hazard

What surfaces can the dancefloor be placed on?

Flat, hard surfaces such as wood or concrete are recommended. Plush carpet or rubber surfaces are acceptable but may cause increased movement and height discrepancies. Uneven or inconsistent surfaces (such as lawns) are not acceptable

Is a delivery charge included?

A delivery charge is separate to your dancefloor quote. Delivery charges begin from \$80 (each way) depending on your location and distance from our Ferntree Gully warehouse. Delivery is a requirement for dancefloor hire. We do not accept collections for dancefloor hire. Please contact our office for prices for a delivery quote based on your location

ON THE NIGHT OF YOUR EVENT

I have noticed some slight movement in the dancefloor tiles. Is this an issue?

Minor movement up and down is normal if the dancefloor is set up on carpet or on softer surfaces. Movement will decrease once the dancefloor is full of people. The dance floor tiles will not separate while in use as the whole floor is screwed together from the outside

There are noticeable gaps & height discrepancies between tiles. Is this a problem?

As the dancefloor consists of individual tiles slight gap & height discrepancies are normal. Discrepancies will be more noticeable on softer surfaces such as carpet. Gap & height discrepancies within 1cm are normal and not a safety concern. Height discrepancies will even out and will not be noticeable once dancers are on the dancefloor

How do I change the colours, patterns & speed of the dancefloor?

Colours, patterns & speed are all pre programmed prior to the installation of the dancefloor. The standard sequence will cycle through randomised patterns utilising 8 standard colours. Reprogramming for custom colours, patterns & speeds are available at an extra cost. Refer to the "Colour Sequences" section on the previous page for further information

How do I turn on/off the dancefloor? Simply flick the switch at the powerpoint to turn off/on the dancefloor

The dancefloor stopped working / there is an issue with the dancefloor. How can I fix it?

Your dancefloor will be installed by our qualified staff and tested prior to your event. Should there be an issue after the installation do not attempt to correct the problem yourself. Please contact the emergency number that was given to you with your booking confirmation. Our technicians will assist in correcting the issue as quickly as possible